


6 Speed Mechatronic Solenoid Kits

The mechatronic units are displayed to show component location and sequence of EDS & MV solenoid valves, the actual mechatronic of your application might look different. Use of these Solenoid kits should be strictly by transmission part number reference.


Kit part number 1068 298 043

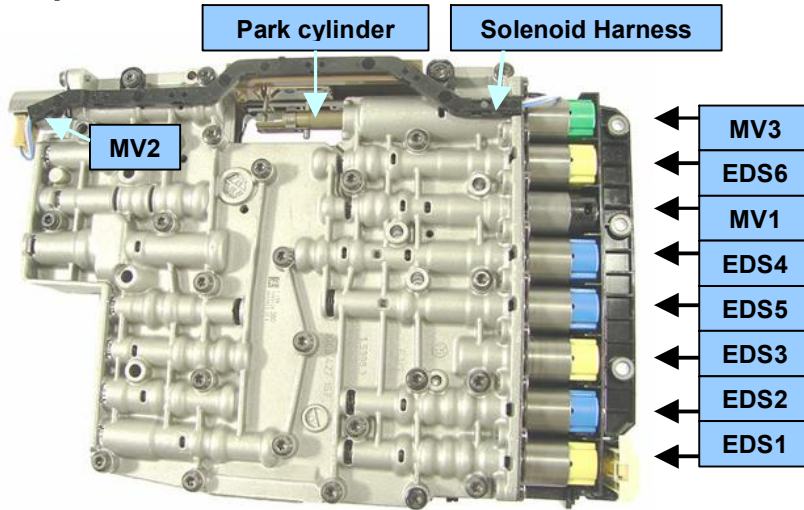

Kit Content 1068 298 043
 3 x EDS (1, 3, 6) yellow
 3 x EDS (2, 4, 5) blue
 2 x MV (MV1, MV2) black
 1 x MV (MV3) green
 1 x Park cylinder
 1 x Solenoid harness




Kit part number 1068 298 044

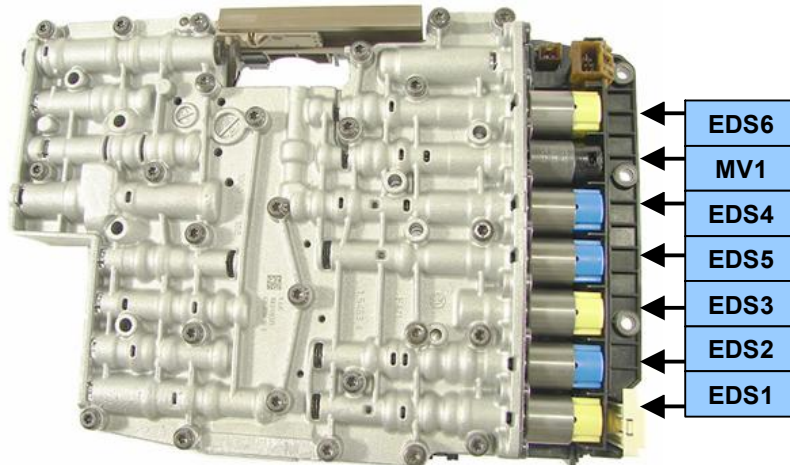

Kit Content 1068 298 044
 3 x EDS (1, 3, 6) yellow
 3 x EDS (2, 4, 5) blue
 1 x MV (MV1) black



Kit part number 1068 298 045

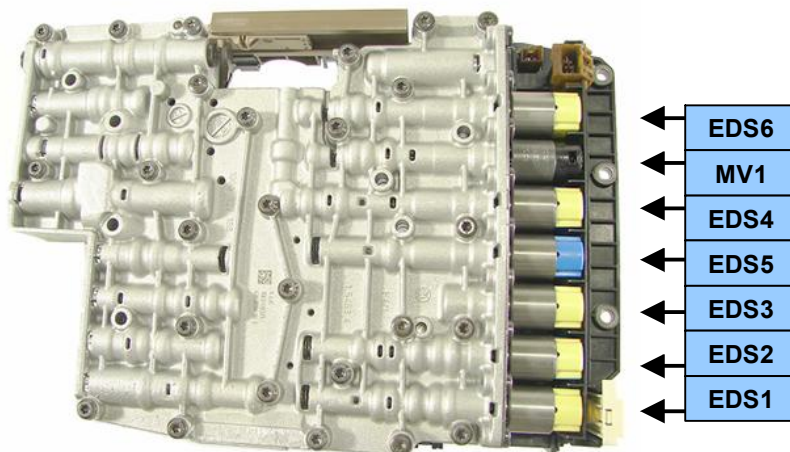


Kit Content 1068 298 045
 5 x EDS (1, 3, 4, 5, 6) yellow
 1 x EDS (2) blue
 1 x MV (MV1) black



6 Speed Mechatronic Solenoid Kits


Kit part number 1068 298 046

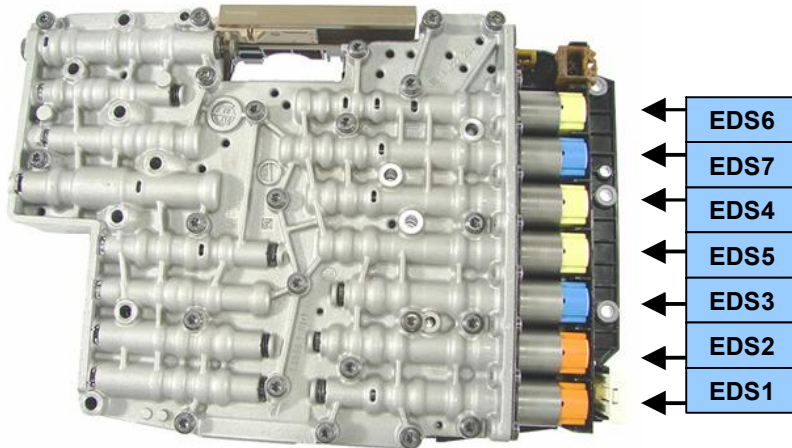

Kit Content 1068 298 046
 3 x EDS (4, 5, 6) yellow
 2 x EDS (3, 7) blue
 2 x EDS (1, 2) orange



Kit part number 1068 298 047


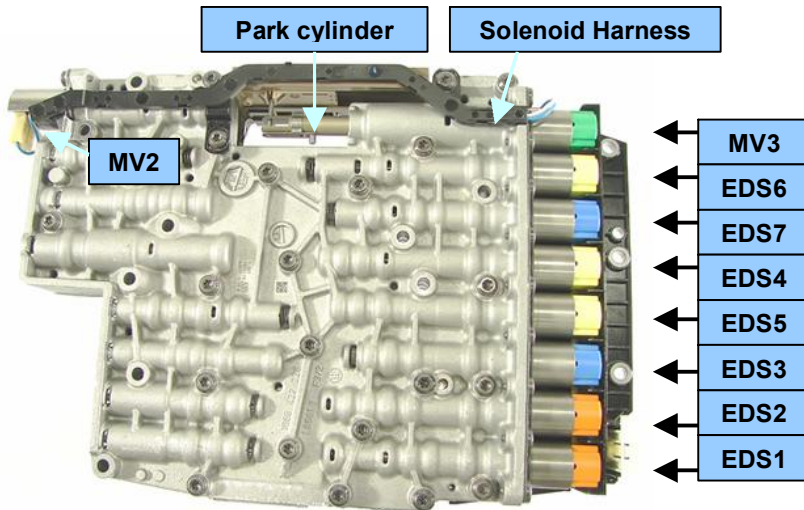


Kit Content 1068 298 047
 3 x EDS (4, 5, 6) yellow
 2 x EDS (3, 7) blue
 2 x EDS (1, 2) orange
 1 x MV (MV2) black
 1 x MV (MV3) green
 1 x Park cylinder
 1 x Solenoid harness



6 Speed Mechatronic Solenoid Kits

Transmissions are identified as follows:

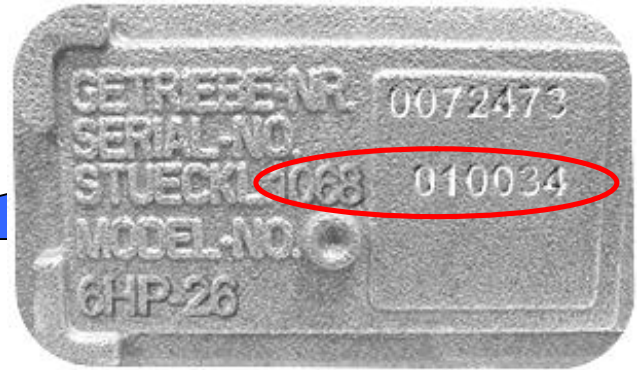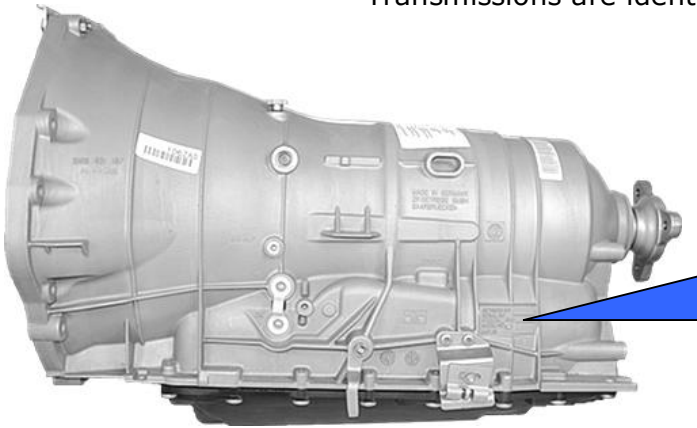

The first 4 digits of the "Main Parts List" are cast into the transmission housing, followed by the remaining 6 digits stamped into the housing.
Main Parts List in this example = **1068 010 034**

In the column below, find the **Main Parts List** that is a match with the trans you are working on. The column to the right will show the part number for the mechatronic solenoid kit.

Solenoid Kit number

Transmission	Main Parts List	Solenoid Kit
6HP19	1071 010 ... 013/028	1068 298 043
6HP26	1068 010 ... 026/027/028/029/034/051/052/053/054 057/059/060/061/062/074/082/083/084/087/092/096 097/098/106/123/124/125/126/127/134/152/166/167 168/169/171/173/183/191/192/193/194/209	
6HP26X	1068 020 ... 033/037/076/078/084	
6HP32	1070 010 ... 004/006/007/008/010/011/013/014/015 016/017	

Transmission	Main Parts List	Solenoid Kit
6HP19	1071 010 ... 005/006/007/020/021/023/024/025/027 029/033	1068 298 044
6HP19X	1071 020 ... 007	
6HP19A	1071 040 009/013/014/015/016/019/020/021/022 023/024/026/027/028/033/034/035/037/038/039/040 043/044/052/059/063/064/065/066/067/077/079/107 113/114	
6HP26	1068 010 ... 030/031/032/033/036/037/038/039/043 044/045/046/050/063/064/065/066/067/069/070/071 073/075/076/077/078/079/085/086/091/093/094/095 100/101/102/103/104/105/111/112/113/114/115/116 117/118/119/121/128/129/130/135/136/137/138/160 161/162/163/164/165/175/176/177/178/181/185/201 203/204/205/206/207/208/215	
6HP26A	1068 014 ... 008/010/014/017/020/021/025/026/027 028/036/039/045/052/053	

6 Speed Mechatronic Solenoid Kits

6HP26X	1068 020 ... 002/003/004/011/014/018/020/027/029 030/034/035/036/038/043/044/045/046/047/051/052 053/054/055/057/058/059/064/065/066/068/069/070 071/072/074/075/086/088	1068 298 044
6HP26A61	1068 030 ... 014/015/017/018/024/027/029/030/031 032/033/035/036/037/038/048/049/056/072/073/078	
6HP32	1070 010 ... 019/020	
6HP32A	1070 020 ... 007	

Transmission	Main Parts List	Solenoid Kit
6HP19X	1071 020 ... 004/008/009	1068 298 045
6HP19A	1071 040 ... 029/030/031/032/036/041/048/049/050 051/068/069/070/071/072/073/074/075/076/080/081 082/083/084/085/086/087/088/089/090/091/092/094 100/101/102/103/104/109/110/111	
6HP26A	1068 014 ... 029/031/033/034/038/040/041/042/046 048/049/050/051/056/057/059/060/061	
6HP26A61	1068 030 ... 039/040/041/043/044/058/059/060/061 067/068/069/070/075/080/081/082/083	
6HP32X	1070 030 ... 005	

Transmission	Main Parts List	Solenoid Kit
6HP21	1071 030 ... 003/004/006/013/014/016/017/018/025 026/027/029/030/034/035/037/038/044/046	1068 298 046
6HP21X	1071 050 ... 006/012/014/015/017/023	
6HP28	1068 040 ... 001/002/014/015/018/021	
6HP28A	1068 036 ... 001	
6HP28X	1068 050 ... 002/004/008/013/014/015/018/019/020 021	
6HP28A61	1068 036 ... 001/002/004	

Transmission	Main Parts List	Solenoid Kit
6HP21	1071 030 ... 019/020/021/022/023/024/031/040/042 047/049/055	1068 298 047
6HP21X	1071 050 ... 001/008/009/010/011/016/022	
6HP28	1068 040 ... 008/009/010/011/012/013/016/023/024	
6HP28X	1068 050 ... 001/003/007/009/010/011/012/016	